





Alvium 1800 C-2050m

- IMX183 CMOS sensor
- ALVIUM image processing
- MIPI CSI-2 interface
- Various hardware options

Hardware option: Open Housing C-Mount

Alvium 1800 C – High-performance camera modules for embedded vision

Machine vision sensors for embedded system developers

Alvium 1800 C-2050 with Sony IMX183 runs 25.0 frames per second at 19.7 MP resolution.

The powerful Alvium 1800 C MIPI CSI-2 camera series gives embedded system developers access to Sony's high-performance image sensors popular in the machine vision industry. These sensors with resolutions up to 20 megapixels deliver excellent image quality and up to twice the frame rates compared to similar Alvium 1500 C models.

To operate Alvium CSI-2 cameras on your vision system, Allied Vision provides different access modes: - **GenlCam for CSI-2 Access** controls the camera by GenlCam features, using the Alvium CSI-2 driver and CSI-2 transport layer (TL) directly. Currently, Alvium 1800 C-500, C-507, C-511, C-1236, and C-2050 are supported. Please find FAQs and installation instructions in the **Getting Started with GenlCam for CSI-2** application note. - **Direct Register Access (DRA)** to control the cameras via registers for advanced users. - **Video4Linux2 Access** allows to control the cameras via established V4L2 API and applications like GStreamer and OpenCV. Open-source CSI-2 drivers are available on **GitHub** for different boards and system on chips (SoCs).

See Customization and OEM Solutions webpage for Alvium Cameras Hardware Options.

Specifications

Alvium 1800 C-2050m Open Housing C-Mount

Product code

14881



Alvium 1800 C-2050m Open Housing C-Mount	
Interface	MIPI CSI-2, up to 4 lanes
Resolution	5376 (H) × 3672 (V)
Spectral range	300 to 1100 nm
Sensor	Sony IMX183
Sensor type	CMOS
Shutter mode	Rolling shutter
Sensor size	Type 1
Pixel size	2.4 μm × 2.4 μm
Lens mount	C-Mount
Max. frame rate at full resolution	25 fps using 4 lanes, RAW8 (GREY)
ADC	10 Bit
Image buffer (RAM)	256 KByte
Non-volatile memory (Flash)	1024 KByte
Imaging performance data is based on the evaluation methods in the EMVA 1288 Release 3.1 standard for characterization of image sensors and cameras. Measurements are typical values for monochrome models measured without optical filter.	
Quantum efficiency at 529 nm	80 %
Temporal dark noise	6 e⁻
Saturation capacity	14900 e⁻
Dynamic range	65 dB
Absolute sensitivity threshold	7.9 e [−]
Output	
Bit depth	Max. 10 Bit
Monochrome pixel formats	GenICam for CSI-2 Access: Mono8, Mono10, Mono10p
	RAW8 (GREY), RAW10 (Y10) [MIPI CSI-2 (FOURCC)]
Raw pixel formats	RAVVO (GRET), RAVVIO (TIO) [MIPI CSI-2 (FOORCE)]
·	purpose inputs/outputs (GPIOs)
·	
General TTL I/Os	purpose inputs/outputs (GPIOs)
General TTL I/Os	purpose inputs/outputs (GPIOs) 2 programmable GPIOs



Alvium 1800 C-2050m Open Housing C-Mount


Power consumption Typical: 2.9 W

Mass 40 g

Body dimensions (L \times W \times H in mm) 26 \times 29 \times 29

Regulations 2011/65/EU, including amendment 2015/863/EU (RoHS)

Quantum efficiency

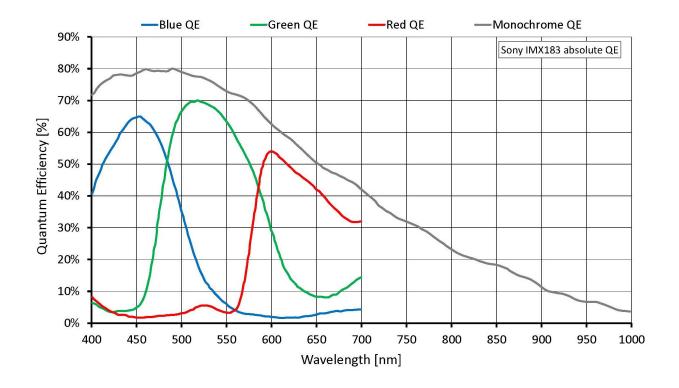

Features

Image control: Auto

- Auto exposure
- Auto gain
- Auto white balance (color models)



Image control: Other

- Adaptive noise correction*
- Binning*
- Black level
- Color transformation (incl. hue, saturation; color models)
- Contrast*
- Custom convolution*
- De-Bayering up to 5×5 (color models)
- DPC (defect pixel correction)
- Gamma
- LUT (look-up table)
- Reverse X/Y
- ROI (region of interest)
- Sharpness/Blur*

Camera control

- Acquisition frame rate
- Bandwidth control
- Firmware update in the field
- I/O and trigger control
- Temperature monitoring
- User sets*

^{*}GenICam for CSI-2 Access



Technical drawing

